


**Please read this manual
carefully before use!**

User Manual



Portable power station

KS 2500PS

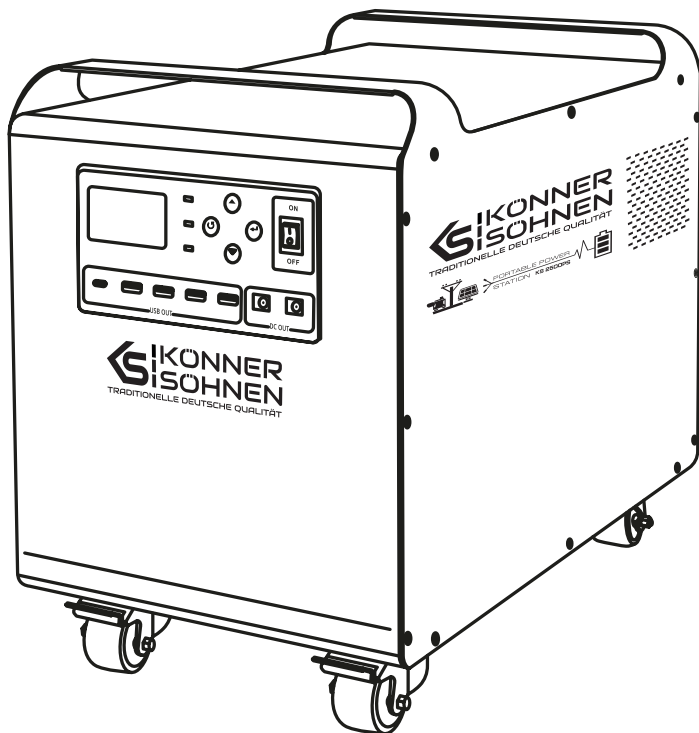

INTRODUCTION



Thank you for choosing **Könnner & Söhnen®** products. This manual provides a brief description of safety requirements, setup procedures, and operating instructions. More information is available in the support section at: konner-sohnen.com/pages/instructions

You can also download the manual by scanning the QR code or by visiting the official importer's website at www.konner-sohnen.com



Please, read this manual carefully before use!

The manufacturer reserves the right to make changes that may not be reflected in this manual, including:

- The manufacturer reserves the right to make changes in the product design, configuration and construction.
- The images and drawings in this manual are for reference only and may differ from the actual components and inscriptions on the products.

Contact information for technical support is provided on the official website. All information in this manual is correct to the best of our knowledge at the time of publication. The current list of service centers can be found on the official importer's website at www.konner-sohnen.com



ATTENTION - DANGER!



Failure to follow the recommendations marked with this sign may lead to serious injury or death of the operator or third parties.



IMPORTANT!



Useful information while operating the machine.

PRODUCT DESCRIPTION

1

This product is a multi-function power station that combines a storage battery, MPPT solar charge controller, high frequency pure sine wave inverter and uninterruptible power supply system, and is suitable for emergency power supply or mobile use;

Thanks to the advanced MPPT solar charge controller and intelligent management of the built-in battery, the power station ensures maximum electricity production;

The built-in inverter generates "pure sine", has high efficiency, high power, small size and other advantages, and is easy to operate;

The whole unit has high efficiency and low static load losses, as well as high productivity and high power density, which is important for a mobile system.

SAFETY INFORMATION

2

- Before using this unit, please read all instructions and precautions on this unit, understand all relevant chapters in this manual to prevent explosion which may lead to personal injury and battery damage.
- Do not disassemble the unit. When service or repair is required, send it to a professional service center. Incorrect assembly may result in electric shock or fire.
- To reduce the risk of electric shock, disconnect all wiring before attempting any maintenance or cleaning. Turning off the device does not reduce this risk.


FEATURES

- Pure sine Wave AC Output Inverter with 2.5 kW rated power and power factor 1.
- High performance with small dimensions, transport wheels for high mobility.
- Setting input voltage and voltage range on the LCD Screen.
- 5V USB and 12V DC output supported.
- Settings and the most important parameters on the display. Protection functions such as overload, over temperature and short circuit.

BASIC SYSTEM STRUCTURE


3

PUBLIC POWER GRID, GENERATOR AND SOLAR PANELS AS A POSSIBLE ENERGY SOURCE

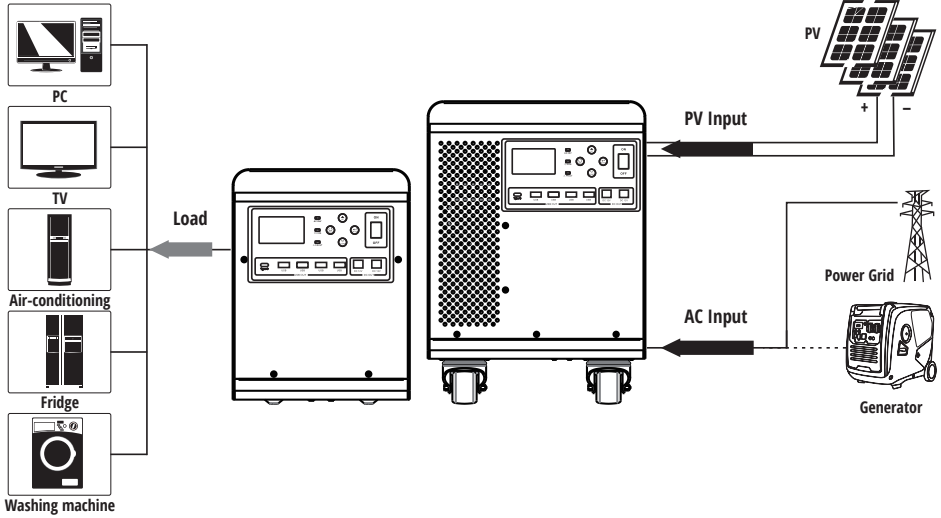

MAIN OVERVIEW


4

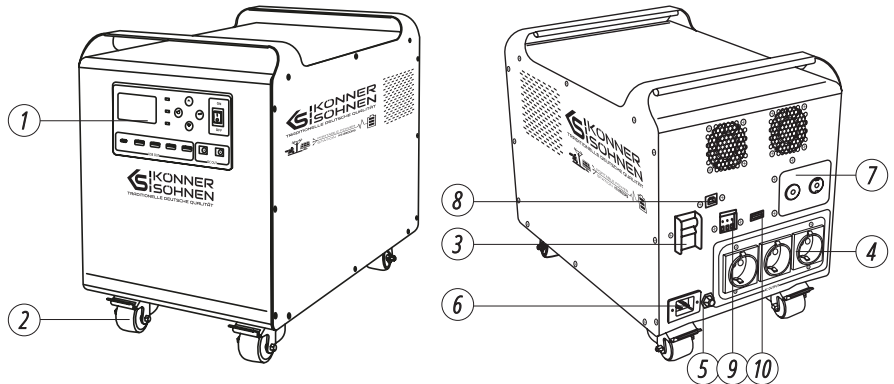

1. Control panel
2. Transport wheels
3. DC breaker (internal battery)
4. AC output
5. AC breaker

6. AC Input
7. PV Input
8. USB for host computer
9. Programmable dry contacts
10. USB for Wi-Fi datalogger (optional)

1. LCD display
2. Function buttons
3. Switch
4. DC 12V outputs
5. DC 5V USB outputs
6. Fault indicator
7. Charge indicator
8. AC output indicator

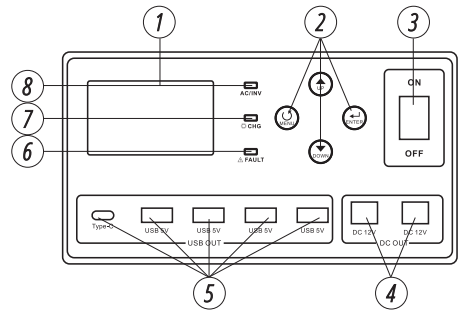

THE PACKAGE INCLUDES:

- Machine
- User manual
- Mains input line



IMPORTANT!



Manufacturer reserves the right to make changes and/or improvements in design, components set and technical attributes without notice and without incurring obligation. The pictures in this manual are schematical and may not match the parameters of original product.

TECHNICAL SPECIFICATION



5

Model		KS 2500PS
INVERTER	Rated power, W	2500
	The shape of the output	Pure Sine Wave
	AC output voltage, V	230 V
	Rated battery voltage, V	25.6 (DC)
	Efficiency	90%
PV INPUT	Max charge current, A	60
	Efficiency of the MPPT converter	98% max
	Maximum idle voltage from solar panels, V	160 (DC)
	MPPT voltage range from solar panels, V	30~128 (DC)
AC INPUT	Rated input voltage, V	230 ± 5% (AC)
	Input voltage range, V	90~280 (AC)
	Frequency, Hz	50
	Switchover time to battery operation, ms	10 (UPS, VDE); 20 (APL, VDE, GEN)
	Max battery charge current, A	60 A
Built-in battery	Battery type	LiFePo4
	Capacity	100 Ah/2560 Wh
	Rated voltage, V	25.6 (DC)
12V DC output		+
5V output		+
Dimensions (L×W×H), mm		450×370×320
Net weight, kg		31

Before turning on the device, please reserve a distance of more than 30 cm above the device and to the left and right to ensure for heat dissipation. To ensure the best operation, the ambient temperature should be between 0–50 °C.

INPUT AND OUTPUT CONNECTION

1. After power on, you can directly take power from the AC output.
2. DC outputs are active even without the station being fully turned on.
3. Connect the grid and the AC input terminal with the matching wires to load the mains and charge the battery.
4. Please make sure the cable is firmly connected and do not move the machine while it is running.

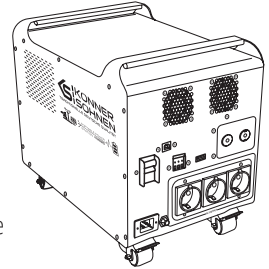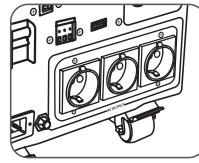

ATTENTION - DANGER!




Only applicable to refractory surfaces.

CONNECTING PV PANELS

The open-circuit voltage (Voc) of the solar array connected to the PV input must not exceed the maximum voltage of 160 V DC.

Under load, the solar array voltage should be in the 30–128 V DC range.


The KS 2500PS solar power station features a low-voltage PV input and is suitable for mobile use. Since most portable solar panels have an output voltage below 30 V, two panels must be connected in series to ensure the solar array's output voltage falls within the KS 2500PS's permissible MPPT voltage range.

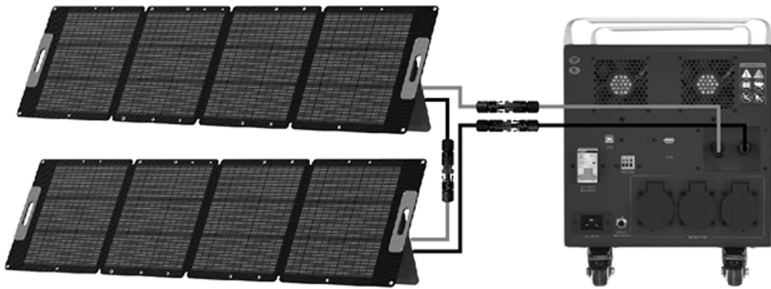

The cable length between the modules and the power station must not exceed 10 m.

The KS 2500PS solar power station does not have a built-in DC PV-break switch. Permanently installed solar arrays (PV systems) should be connected via an external DC load-break switch. If the cable length between the panels and the power station is 10 meters or more, surge and lightning protection must be installed.

In this case, we recommend using a PV box with integrated surge protection and a DC load-break switch. PV cables should be routed parallel to each other whenever possible (to avoid forming loops).

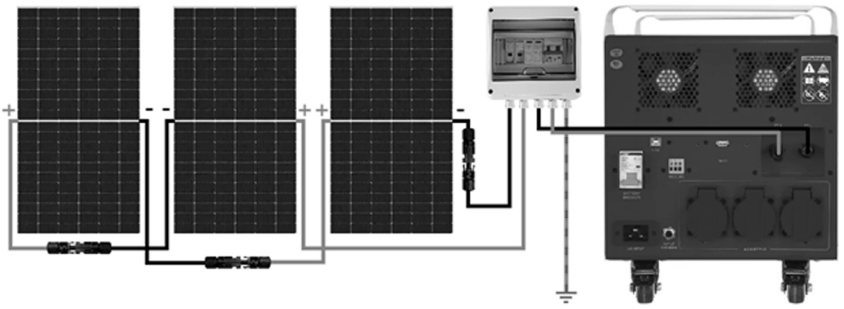**IMPORTANT!**

The solar array must be installed in accordance with local standards and regulations.

DC Load-Break Switch (Solar Disconnect):


This is required on virtually all permanently installed solar arrays. It allows emergency responders or technicians to safely cut off the high-voltage Direct Current (DC) flowing from the panels to the inverter while the system is under load.

Surge Protection Devices (SPD):

Solar panels are highly vulnerable to lightning strikes and voltage spikes due to their outdoor, exposed nature. When DC cable runs from the array to the inverter reach or exceed 10 meters (around 32 feet), the risk of induced surges increases significantly, making a dedicated DC SPD mandatory to protect the inverter and building infrastructure.

OPERATION

7

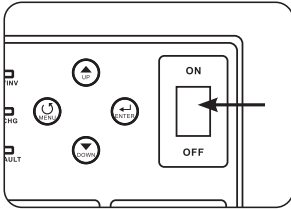


TURNING THE INVERTER MODULE ON AND OFF

This switch activates the inverter module, which converts the DC voltage of the battery into AC 230V. The DC outputs on the front panel and the PV input are permanently active regardless of this switch. The 230V AC output in battery mode is only activated when this switch is turned on. The 230V AC output becomes active regardless of this switch when the power station is connected to the AC power source. Make sure that this switch is turned on if you are using the power station as an uninterruptible power supply, so that the AC output continues to work even if the AC power source is lost.

OPERATING AND DISPLAY PANEL

The control and display panel, shown in the figure below, is located on the front of the power station. It includes three LED indicator lights, four function buttons and an LCD screen from which you can read the most important parameters and check and, if necessary, change menu settings.

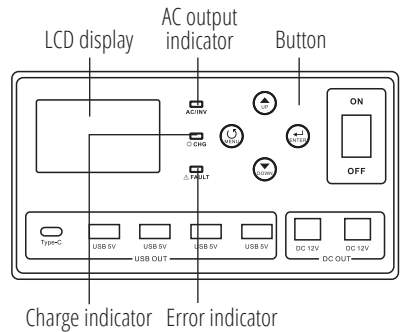


LED INDICATOR

LED Indicator			Messages
AC/INV	Green	Solid On	Output is powered by grid in line mode.
		Flashing	Output is powered by battery or PV in battery mode.
CHG	Yellow	Flashing	Battery is charging.
FAULT	Red	Solid On	Fault occurs in the powerstation.
		Flashing	Warning condition occurs in the powerstation.


FUNCTION KEYS

Function Keys	Description
MENU	Activate reset mode. 1 step back in setting mode.
UP	Display parameters forward. Setting parameters up.
DOWN	Display parameters back. Setting parameters down.
ENTER	Call up setting mode. Confirm selection. Next menu item. Exit reset mode.

LCD DISPLAY ICONS

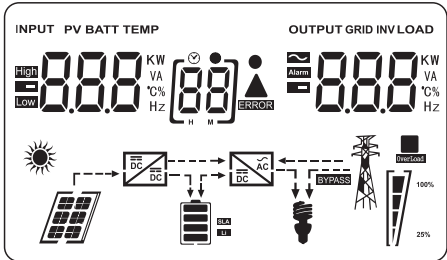

CHARGE LEVEL OF THE INTERNAL BATTERY

 

WARNING!



Do not discharge below 10%!
Check the charge level without load!

Icon	Function description			
Input Source Information and Output Information				
	Indicates the AC information.			
	Indicates the DC information.			
	Displays input voltage, input frequency, solar panel voltage, battery voltage and charging current. Displays output voltage, frequency, load in VA, load in W and battery discharge current.			
Setting and fault information				
	Indicates the number of setting parameter.			
	Indicates the warning and fault codes. Warning: flashing 88 ⚠ with warning code. Fault: lighting 88  with fault code.			
Output power indicators				
	Indicates overload.			
	Indicates the load by 0-24%, 25-49%, 50-74% and 75-100%.			
	0% ~ 24%	25% ~ 49%	50% ~ 74%	75% ~ 100%
				
Operation mode information				
	Indicates unit connected to the external AC power supply.			
	Indicates the connection of the device to the solar panels.			
	Indicates load is supplied by external AC power supply.			
	Indicates the solar charger is working.			
	Indicates the DC/AC inverter circuit is working.			
Mute Operation				
	Indicates unit alarm is disabled.			

MENU SETTINGS

8

By holding down the "ENTER" button for approx. 3 seconds, the device enters setting mode.

Press the "ENTER" button to go to the desired setting parameter. Press the "UP" or "DOWN" button to change the selected setting parameter.

Press the "ENTER" button to confirm the change and go to the next setting parameter.

Press the "MENU" button for approx. 3 seconds or scroll through all setting parameters with the "ENTER" button to exit setting mode.

SETTING PARAMETERS

Parameter	Description	Selectable option	
00	Exit setting mode	[00] ESC	
01	Output source priority selection	[01] SBU	Solar energy provides power to the loads higher than the setting point of parameter 21 for 5 minutes, the inverter will turn to battery mode, solar and battery will provide power to the load at the same time. When the battery voltage drops to the setting point of parameter 20, the inverter will turn to bypass mode, utility provides power to the load only, and the solar will charge the battery at the same time.
		[01] SOL	Solar energy provides power to the loads higher than the setting point of parameter 21 for 5 minutes, and the solar energy has been available for 5 minutes too, the inverter will turn to battery mode, solar and battery will provide power to the load at the same time. When the battery voltage drops to the setting point of parameter 20, the inverter will turn to bypass mode, utility provides power to the load only, and the solar will charge the battery at the same time.
		(default) [01] UT.	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.
02	AC input voltage range	[02] APL	If selected, acceptable AC input voltage range will be within 90-280V AC.
		[02] UPS	If selected, acceptable AC input voltage range will be within 170-280V AC.
		[02] VDE	If selected, acceptable AC input voltage range will conform to VDE 4105 (184V AC-253V AC).
		[02] GEN	When the user uses the device to connect the generator, select the generator mode.
03	Output voltage (battery operation)	[03] 230 ^v	Set the output voltage, (220VAC-240VAC)

Parameter	Description	Selectable option	
04	Output frequency	50 Hz (default) [04] 50.0	60 Hz [04] 60.0
05	Solar supply priority	[05] bLU	Solar energy provides power to charge battery as first priority.
		(default) [05] LbU	Solar energy provides power to the loads as first priority.
06	Overload bypass	Bypass disable [06] bYd	Bypass enable (default) [06] bYE
07	Overload restart	Restart disable (default) [07] Lt-d	Restart enable [07] Lt-E
08	Overtemperatur restart	Restart disable (default) [08] t-d	Restart enable [08] t-E
10	Charger source priority: To configure charger source priority	If this power station is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first [10] C50	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility (default) [10] SNU	If the powerstation is working in Battery mode or Power saving mode, only solar energy can charge the battery. Solar energy will charge a battery if it's available and sufficient.
11	Maximum battery charging current for solar + from the external AC power source	Only Solar [11] 050	Solar energy will be the only source of energy regardless of the availability of power from the grid.
		[11] 60 A	Setting range is from 1A to 60A. Increment of each click is 1A.

Parameter	Description	Selectable option	
13	Maximum battery charging current from the external AC power source	[13] 60 ^A	Setting range is from 1A to 60A. Increment of each click is 1A.
17	Absorption voltage	28.4V (default) [17] CV 28.4 ^V	Setting range is from 24.0V to 29.2V. Increment of each click is 0.1V
18	Float voltage	27.4V (default) [18] FLV 27.4 ^V	Setting range is from 24.0V to 29.2V. Increment of each click is 0.1 V.
19	Battery low voltage	22.4V (default) [19] CV 22.4 ^V	Setting range is from 20V to 24V. Increment of each click is 0.1 V.
20	Battery stop discharging voltage	23V (default) [20] 23.0 ^V	Setting range is from 22.0V to 29.0V. Increment of each click is 0.1 V.
21	Battery stop charging voltage	27V (default) [21] 27.0 ^V	Setting range is from 22.0V to 29.0V. Increment of each click is 0.1 V.
22	Auto turn page	(default) [22] PLE	If selected, the display screen will auto turn the display page.
22	Auto turn page	[22] Pld	If selected, the display screen will stay at latest screen user finally switches.
23	Backlight control	Backlight on [23] LON	Backlight off(default) [23] LOF
24	Alarm control	Alarm on (default) [24] bON	Alarm off [24] bOF
25	Beeps while primary source is interrupted	Alarm on [25] AON	Alarm off (default) [25] AOF
27	Record Fault code	Record enable (default) [27] FON	Record disable [27] FOF

Parameter	Description	Selectable option	
28	Solar power balance: When enabled, solar input power will be automatically adjusted according to connected load power.	Solar power balance enable [28] 5bE	If this option is enabled, the input power of the solar cell will be automatically adjusted according to the following formula: Max. input power of solar energy, max. battery charging power + connected load power when the device is in offline mode.
		Solar power balance disable (default) [28] 5bd	If selected, the solar input power will be the same to max. Battery charging power no matter how many loads are connected. The max. battery charging power will be based on the setting current in program 11 (Max. solar power, Max. battery charging power)
30	Battery equalization	Battery equalization [30] EE7	Battery equalization disable (default) [30] Ed5
31	Battery equalization voltage	28.8V (default) [17] C ⁴ 28.8 ^v	Setting range is from 24.0V to 29.2V. Increment of each click is 0.1V
33	Battery equalization time	60 min (default) [33] 60	Setting range is from 5 min to 900 min. Increment of each click is 5 min.
34	Battery equalization timeout	120 min (default) [34] 120	Setting range is from 5 min to 900 min. Increment of each click is 5 min.
35	Equalization interval	30 days (default) [35] 30d	Setting range is from 0 to 900 days. Increment of each click is 1 day.
36	Equalization activated immediately	Enable [36] AE7	[36] Ad5 If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "E9". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time "E9" will be shown in LCD main page too.

After pressing and holding “MENU” button for 6 seconds, the unit will enter reset model. Press “Up” and “DOWN” button to select programs. And then, press “ENTER” to confirm the selection and exit the mode.

SEt	(default) [dt] n t t	Reset to factory settings disabled.
	[dt] t SEt	Reset to factory settings enabled.

FAULT REFERENCE CODE

9

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	[01] 
02	Inverter transformer over temperature.	[02] 
03	Battery voltage is too high.	[03] 
04	Battery voltage is too low.	[04] 
05	Output short-circuited.	[05] 
06	Inverter output voltage is high.	[06] 
07	Overload time out.	[07] 
08	Inverter bus voltage is too high.	[08] 
09	Bus soft start failed.	[09] 
11	Main relay failed.	[11] 
21	Inverter output voltage sensor error.	[21] 
22	Inverter grid voltage sensor error.	[22] 
23	Inverter output current sensor error.	[23] 
24	Inverter grid current sensor error.	[24] 

Fault Code	Fault Event	Icon on
25	Inverter load current sensor error.	[25] 
26	Inverter overload (current) error.	[26] 
27	Inverter radiator over temperature.	[27] 
31	Solar charger battery voltage class error.	[31] 
32	Solar charger current sensor error.	[32] 
33	Solar charger current is uncontrollable.	[33] 
41	Inverter grid voltage is low.	[41] 
42	Inverter grid voltage is high.	[42] 
43	Inverter grid under frequency.	[43] 
44	Inverter grid over frequency.	[44] 
51	Inverter overcurrent protection error.	[51] 
52	Inverter bus voltage is too low.	[52] 
53	Inverter soft start failed.	[53] 
55	Over DC voltage in AC output.	[55] 
56	Battery connection is open.	[56] 
57	Inverter control current sensor error.	[57] 
58	Inverter output voltage is too low.	[58] 
61	Fan is locked when inverter is on.	[61] 
62	Fan 2 is locked when inverter is on.	[62] 
63	Battery is over-charged.	[63] 



Fault Code	Fault Event	Icon on
64	Low battery.	[64] 
67	Overload.	[67]   100% 20%
70	Output power derating.	[70] 




WARNING INDICATOR

Fault Code	Fault Event	Icon on
72	Solar charger stops due to low battery.	[72] 
73	Solar charger stops due to high PV voltage.	[73] 
74	Solar charger stops due to over load.	[74] 
75	The solar charging module has overheated.	[75] 
76	PV charger communication error.	[76] 
77	Parameter error.	[77] 

OPERATING STATE DESCRIPTION

  10

Operation state	Description	LCD display
Operation from the external AC power source	AC power consumers are supplied from the power grid. The battery is charged from the PV input.	The PV input is activated 
	AC power consumers are supplied from the power grid. The battery is charged from the PV input and the power grid.	

   Operation state	Description	LCD display
Grid independent operation (standalone mode)	Battery is charged with solar power.	
	AC power consumers are supplied by solar energy. Battery is charged.	
	AC power consumers are supplied by the battery	
Stop mode	The inverter stop working if you turn off the inverter by the soft key or error has occurred in the condition of no grid.	

DISPLAY SETTING

11

The LCD display information will be switched in turns by pressing “UP” or “DOWN” key. The selectable information is switched as below order: battery voltage, battery current, inverter voltage, inverter current, grid voltage, grid current, load in Watt, load in VA, grid frequency, inverter frequency, PV voltage, PV charging power, PV charging output voltage, PV charging current.

Selectable information	LCD display	
Battery voltage/DC discharging current	260 ^{WATT} V	480 ^A
Inverter output voltage/Inverter output current	229 ^{INV} V	6.70 ^A
Grid voltage/Grid current	229 ^V	-30 ^A
Load in Watt/VA	150 ^{KW}	168 ^{LOAD K VA}
Grid frequency/Inverter frequency	500 ^{INPUT} Hz	500 ^{INV} Hz
Voltage and power from solar panels	6.10 ^{PV} V	100 ^{KW}
PV charger output voltage and MPPT charging current	250 ^{PV} V	400 ^{OUTPUT} A



EC Declaration of Conformity

Nr. 197

The following products have been tested by us with the listed standards and found in compliance with the European Community Electromagnetic compatibility Directive (EMC) 2014/30/EC, Low Voltage Directive 2014/35/EC.

Manufacturer: DIMAX INTERNATIONAL GmbH
Address: Flinger Broich 203, 40235 Duesseldorf, Germany
Product: Portable power station "Könner & Söhnen"
Type / Model: KS 2500PS

The statement is based on a single evaluation of above mentioned products. It does not imply an assessment of the whole production and does not permit the use of the test lab. logo. The manufacturer should ensure that all product in series production are in conformity with the product sample detailed in this report. The applicant should hold the whole technical report at disposal of the competent all the right.

Applied EC Directives: 2014/30/EC Electromagnetic compatibility Directive (EMC)
2014/35/EU Low Voltage

Applied Standards: EN 62109-1:2010
EN 62109-2:2011
EN IEC62109-1:2010
EN IEC62109-1:2011
EN IEC61000-6-1:2019
EN IEC61000-6-3:2021



Issued Date:
Place of issue:
Director:

2024-05-06
Duesseldorf
Fomin P.

P. Fomin

DIMAX

International GmbH
Flinger Broich 203 40235 Düsseldorf
USt-ID DE296177274
koenner-soehnen.com

We DIMAX INTERNATIONAL GmbH hereby declare that specified above conforms covering European Parliament and Council Directives, 2014/35/EC Low Voltage Directive of 26 February 2014, Electromagnetic compatibility Directive (EMC) 2014/30/EC of 26 February 2014. The CE mark above can be used under the responsibility of manufacturer. After completion of an EC declaration of Conformity and compliance with all relevant EC directives.

CONTACTS

Deutschland:

Hergestellt unter Lizenz und Kontrolle der DIMAX International GmbH.

Importeur und Vertreter in Deutschland:
DIMAX International GmbH, Flinger Broich 203,
40235 Düsseldorf, Deutschland. Produziert in VRC.
amazon@dimaxgroup.com
www.konner-sohnen.com

European Union:

Manufactured under license and control of DIMAX International GmbH, Flinger Broich 203, 40235 Duesseldorf, Germany.

Importer and representative in Netherlands DIMAX International Poland Ltd, Południowa 8 st,
05-830 Stara Wieś, Poland. Assembled in PRC.
amazon@dimaxgroup.com
www.konner-sohnen.com

The United Kingdom:

Innovation Trade Ltd., 5th Floor, 167-169 Great Portland Street, London, W1W 5PF, sales.uk@dimaxgroup.com

Technical support
support.uk@dimaxgroup.de
www.konner-sohnen.uk

France:

Fabrique sous licence et contrôle de DIMAX International GmbH, Flinger Broich 203, 40235 Düsseldorf, Allemagne.

Importateur et représentant en France et en Belgique DIMAX International Poland Ltd, Południowa 8 st,
05-830 Stara Wieś, Pologne. Assemblé en RPC.
amazon@dimaxgroup.com
www.konner-sohnen.fr

España:

Fabricado bajo licencia y control de DIMAX International GmbH, Flinger Broich 203, 40235 Düsseldorf, Alemania.

Importador y representante en España de DIMAX International Poland Ltd, Południowa 8 st,
05-830 Stara Wieś, Polonia.
Ensamblado en la República Popular China.
amazon@dimaxgroup.com
www.konner-sohnen.es

Polska:

Wyprodukowano na licencji i pod kontrolą DIMAX International GmbH, Flinger Broich 203,
40235 Duesseldorf, Niemcy.

Importer i przedstawiciel w Polsce:
DIMAX International Poland Sp.z o. o. ul. Południowa 8,
05-830 Stara Wieś, Polska. Zmontowany w CRL.
amazon@dimaxgroup.com
www.konner-sohnen.pl

Україна:

Виготовлено за ліцензією та під контролем DIMAX International GmbH, Flinger Broich 203,
40235 Дюссельдорф, Німеччина.

Імпортер та представник в Україні:
ТОВ "ТЕХНО ТРЕЙД КС" вул. Електротехнічна 47,
02225, м. Київ, Україна. Змонтовано в КНР
www.konner-sohnen.com.ua

